
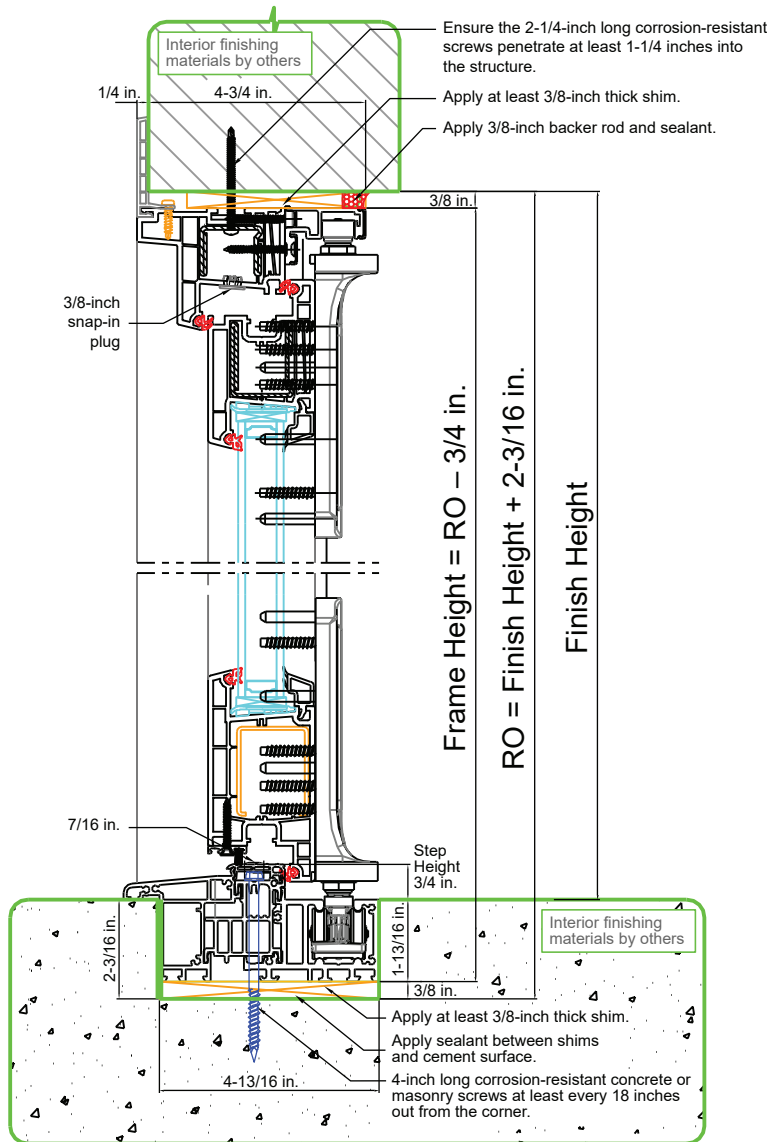


## Rough Opening (RO)

Frame Width = RO - 3/4 in.

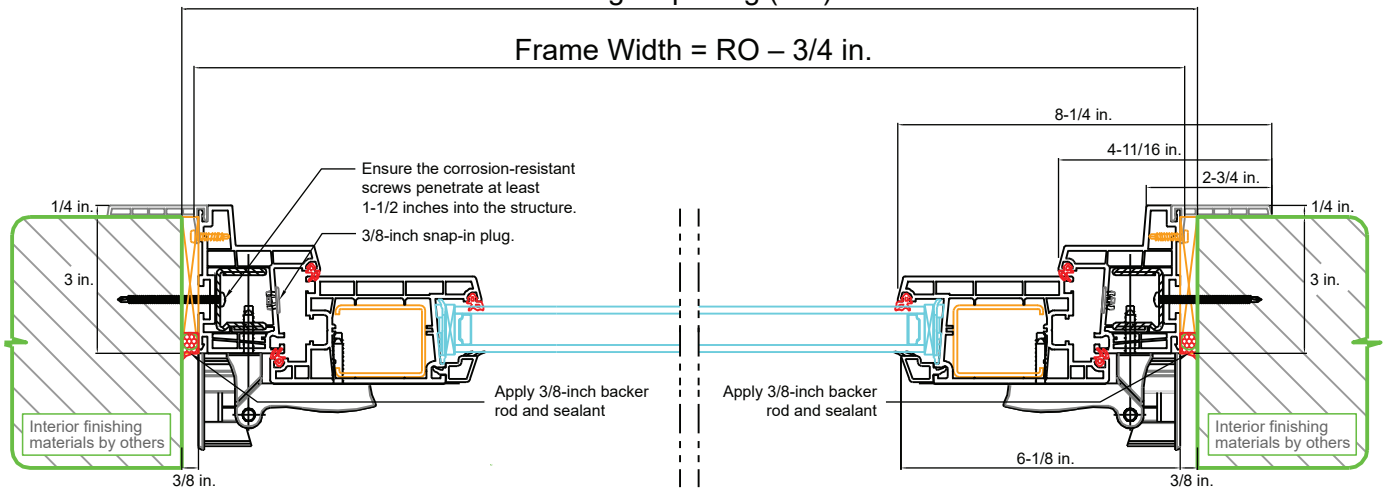



### Valencia "CrystalWall" Bifold Doors

#### Option 1 3 Z-Bars & Low Threshold (2 walls)

CPWDS.com/valencia/bifold/  
DWG-VCBD-081423 © CRYSTAL PACIFIC

# Rough Opening (RO)

Frame Width = RO - 3/4 in.

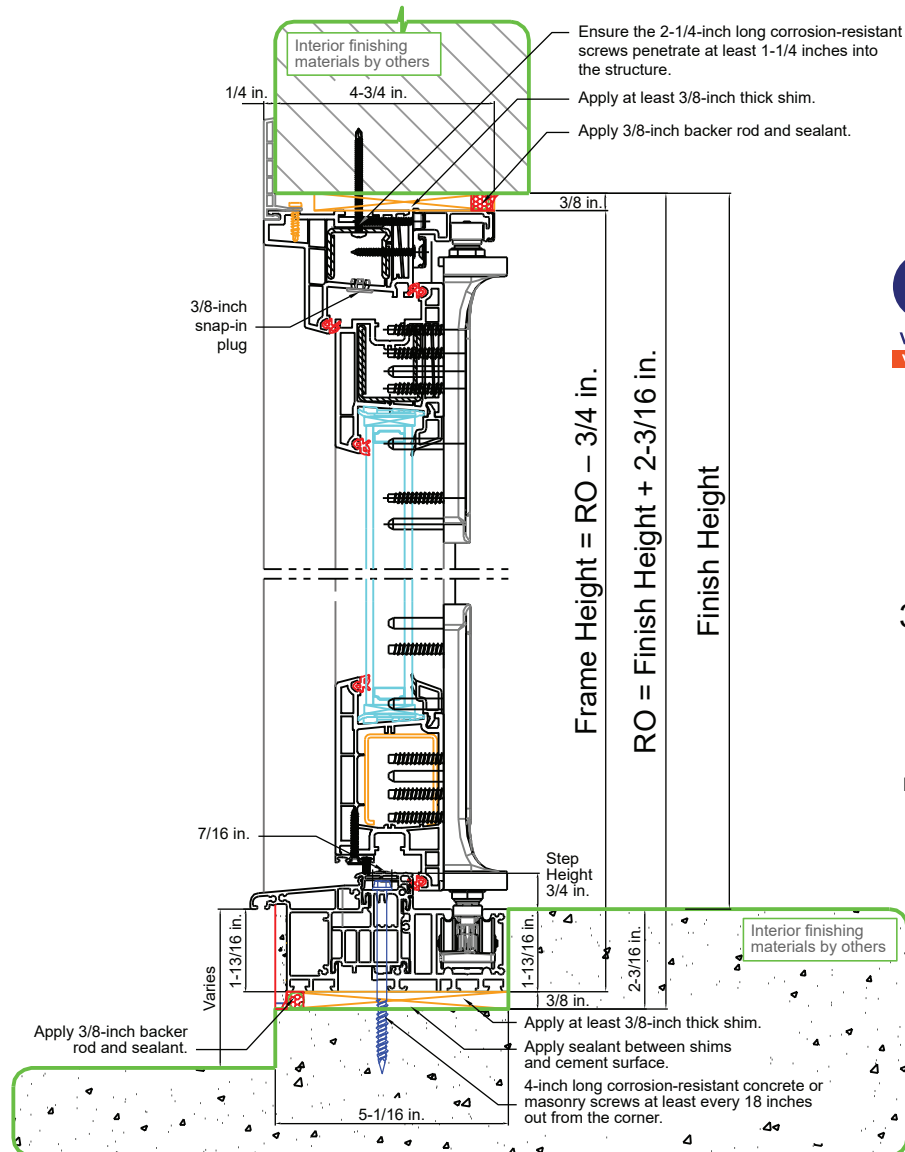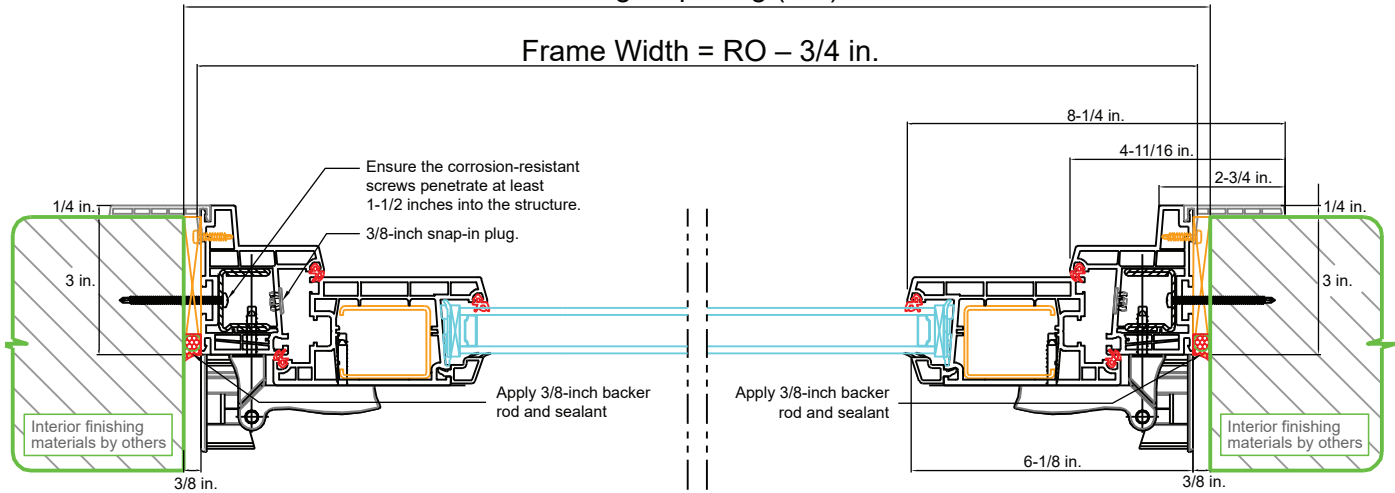



## Valencia "CrystalWall" Bifold Doors

### Option 2 3 Z-Bars & Low Threshold (1 wall)

CPWDS.com/valencia/bifold/  
 DWG-VCBD-081423 © CRYSTAL PACIFIC

# Rough Opening (RO)

Frame Width = RO - 3/4 in.

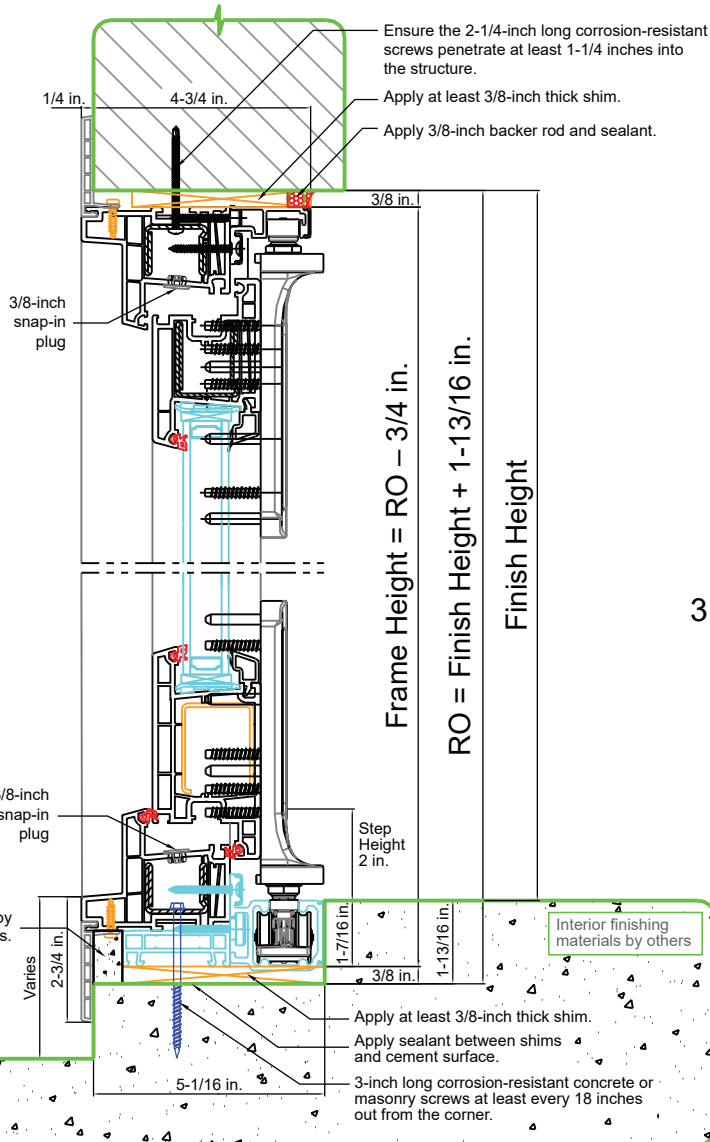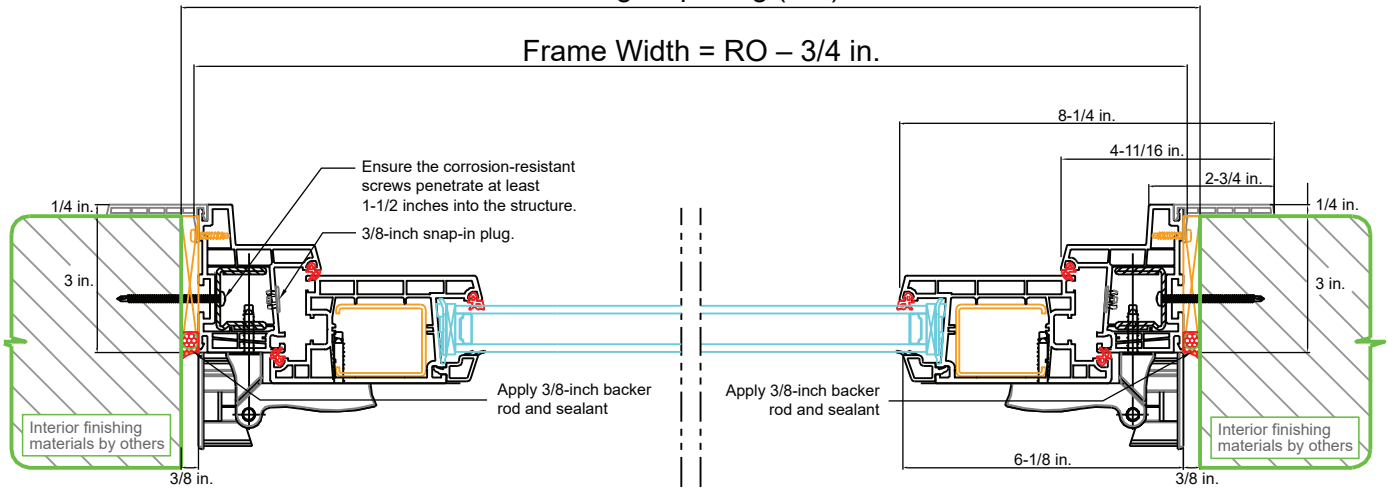

Frame Height = RO - 3/4 in.

RO = Finish Height + 1-13/16 in.

Finish Height



## Valencia "CrystalWall" Bifold Doors

### Option 3 3 or 4 Z-Bars & Height Threshold (1 wall)

CPWDS.com/valencia/bifold/  
DWG-VCBD-081423 © CRYSTAL PACIFIC